

How to unpack 55" and larger FY16 "D" TV models to avoid panel damage

Set-up Guide can be found under Manuals, Spec, Warranty:


<https://esupport.sony.com/>

1) Set-up Guide can be found inside top carton flap:



Set-up Guide taped to top inside tab

2) Pinch and Pull all 4 plastic joints to remove carton and safely remove the TV from tray:

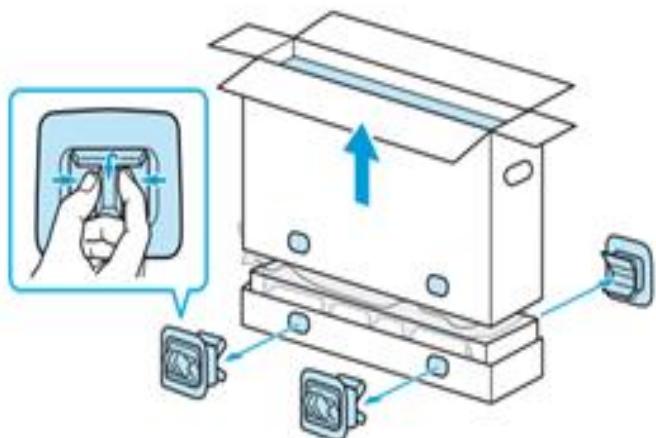

Carton top surface

3) Follow Set-up Guide unpacking illustration (Lift from bottom of TV):

